
WIRE COLOR SCHEME BLUCK - LINE VOLTAGE
RED - AC CONTROL
WHITE - AC GROUNDED
CIRCUIT CONDUCTOR
BLUE - DC CONTROL
GREEN - CHASSIS GROUND

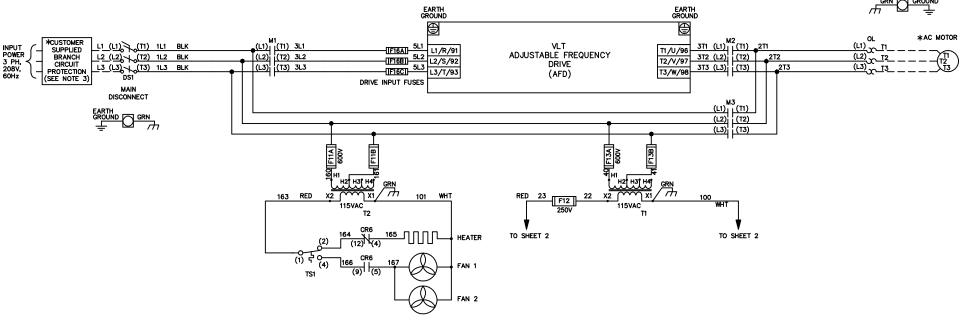

- 1. * INDICATES COMPONENTS NOT SUPPLIED BY MANUFACTURER.
- REFER TO THE INSTALLATION AND OPERATION MANUAL FOR DRIVE FUNCTIONS AND PARAMETER SETTINGS. BRANCH CIRCUIT PROTECTION, INPUT POWER AND MOTOR WIRING MUST BE SELECTED IN ACCORDANCE
- WITH THE N.E.C., ANY APPLICATION LOCAL CODES AND THE LOAD CURRENT RATING. 4. REPLACE JUMPER 'J1' WITH NORMALLY CLOSED SAFETY INTERLOCK CONTACT AS NECESSARY. CONTACT
- MUST BE RATED 1/4 HP @ 120VAC MINIMUM.
- 5. PANEL MAY REQUIRE DERATING, CONSULT DRIVE MANUAL OR FACTORY FOR FOLLOWING CONDITIONS: 5.1. HIGHER SWITCHING FREQUENCY THEN DRIVE DEFAULT
- HIGHER THEN PANEL LISTED AMBIENT TEMPERATURES
- ELEVATION ABOVE 3300 FEET (1000 METERS)
- LONG MOTOR LEAD LENGTHS

WARNING!

THE FOLLOWING TABLE LIST THE PARAMETERS THAT ARE SET DIFFERENT FROM THE DRIVE DEFAULT SETTINGS. ADDITIONAL PARAMETER SETTINGS MAY BE REQUIRED FOR YOUR APPLICATION.

DRIVE PARAMETER SETTINGS

PARAMETER #	NAME	SETTING	VALUE
0-02	MOTOR SPEED UNIT	1	HZ
0-03	REGIONAL SETTINGS	1	NORTH AMERICA
1-03	TORQUE CHAR.	3	AUTO ENERGY OPTIM VT
5-02	TERMINAL 29 TYPE	1	OUTPUT
5-31	TERMINAL 29	5	RUNNING
14-20	RESET MODE	13	INFINITE AUTO REST

Α	I DTM	1	K A A I				
			,MAIN DISC,DRIVE FUSE ,3MB2,SINGLE MOTOR,2 FAN				
REV ECN DATE	APR DTM	MODEL				DWG 1 7	4N451(

